




# RH-100A

## Universal Bedrail Phone Instruction Sheet

Med-Pat's latest Bedrail Phone allows installation on most bedrails used in Hospitals.  
See the chart below to determine which adjustment blocks are used for your application.

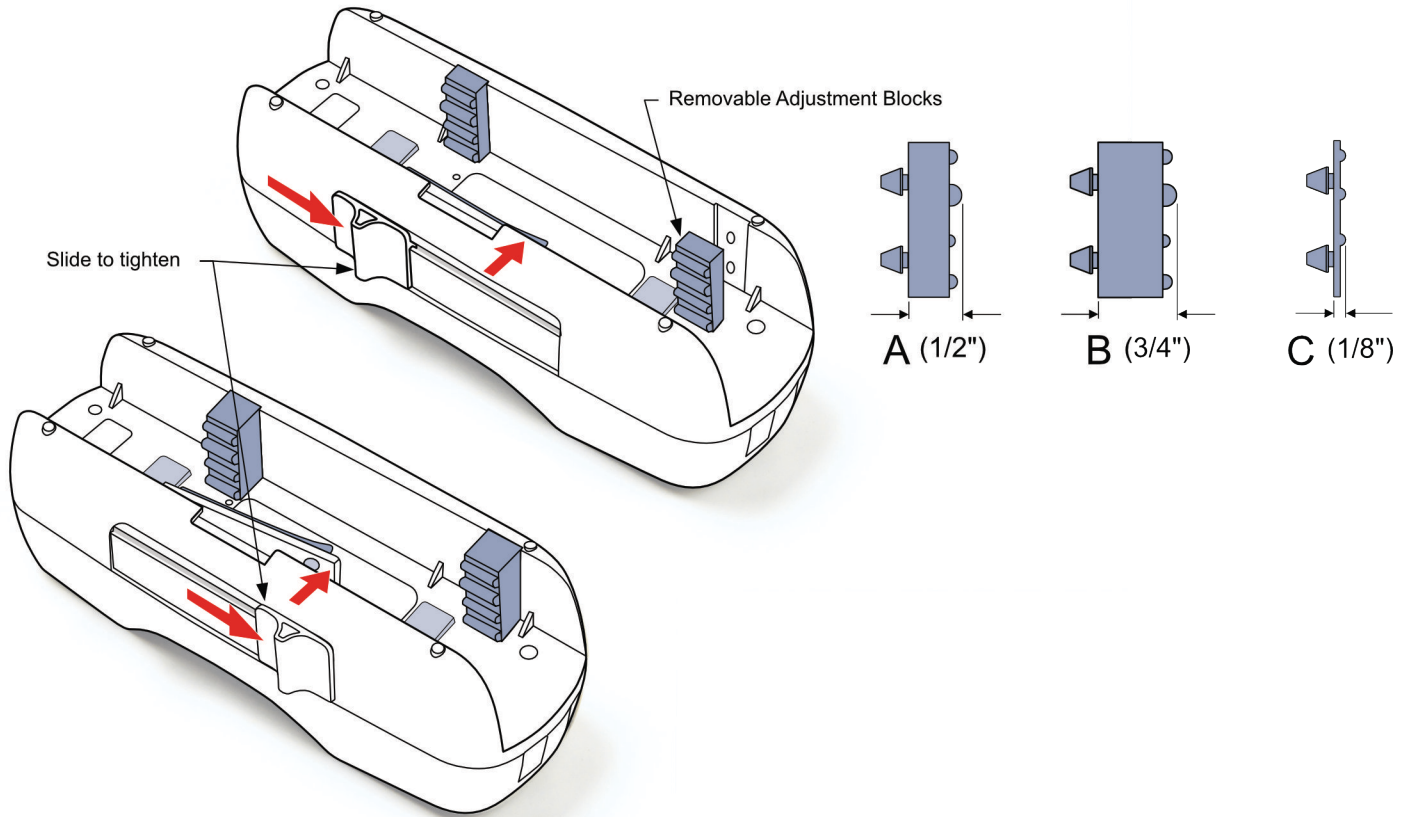

Rubber (Adjustment Blocks)		
A (RH97)	B (RH95)	C (RH99)
Hill-Rom Advanta	Hill-Rom© Original	Hill-Rom Birther
Hill-Rom Progressa	Stryker GoBed	Stryker S-1
Hill-Rom TotalCare		Stryker S-2
Hill-Rom Versa Care		Stryker S-3
LINET Multicare		Stryker Epic II
Stryker GoBed II		Stryker InTouch